


AUGER INTERLOK® COUPLER

Innovative coupler system allows the Aggressor® auger to be equipped with three different connection sizes.

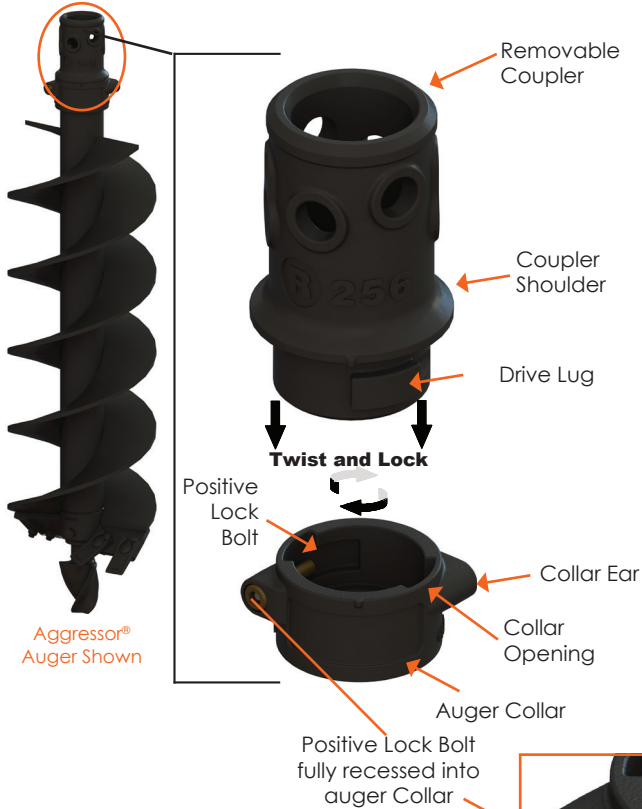

HOW IT WORKS:

1. The Coupler is inserted into the Collar by aligning the Coupler Drive Lugs with the Collar openings located on the top ring of the Collar.
2. The Coupler is inserted into the Collar until the shoulder on the Coupler interfaces with the top of the Collar.
3. The auger coupler is rotated in a clockwise manner to engage the Coupler Lugs with the recessed areas in the Collar. "Twist and Lock".
4. Install the locking hardware. Thread the Positive Lock Pin into the Collar Ears. Positive Lock Bolts have a push button that initiates ball action and retraction.

ITEM	LBS	PN
R-200 INTERLOK HUB	5	154043
R-256 INTERLOK HUB	5	154044
H-200 INTERLOK HUB	5	154045
H-250 INTERLOK HUB	5	154046

INTERLOK

U.S. Patent 9,127,513



A solution for dealers and customers that need to adapt auger bits to various types of auger drives.



The InterLok® system is a variable geometry auger bit coupler. The coupler allows the auger bit to utilize different coupler connections. The ability to use different connection sizes can eliminate the need for auger bit adapters. The new coupler system also allows for more universal adaptability to different types of auger drives that use various output shaft sizes and shapes.